

TruSignal SpO₂ FingerTip Sensor

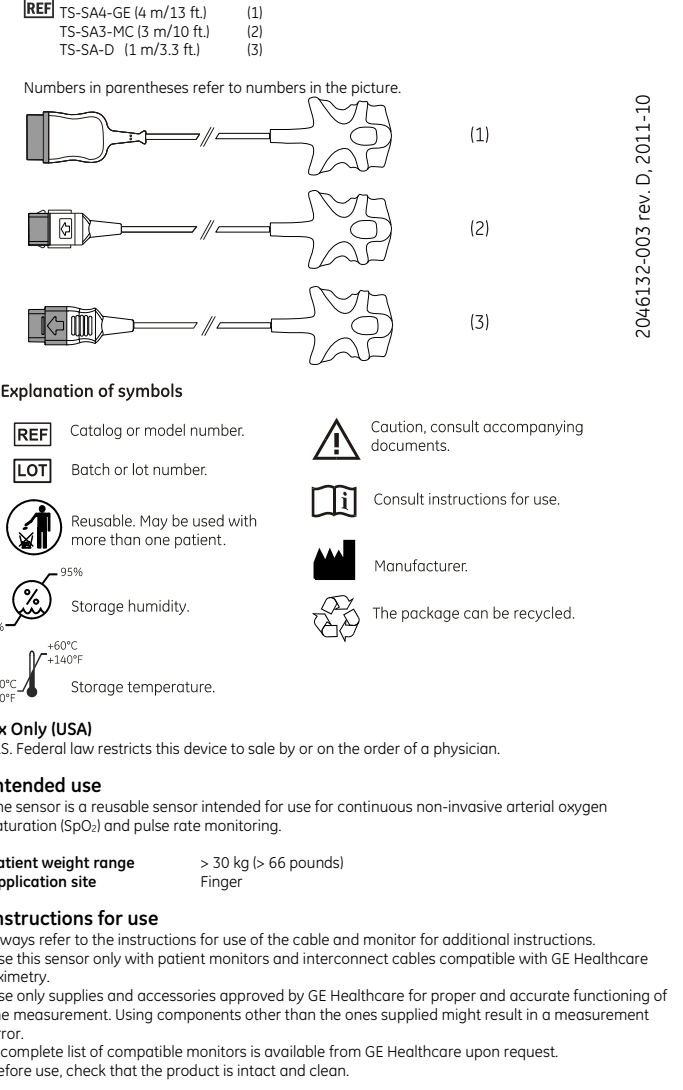


Figure 1.

Preferably apply the sensor to a well perfused site, non-dominant hand.

Press both sensor color pads gently to make the sensor more rounded; this will help when inserting the finger, see Figure 2.

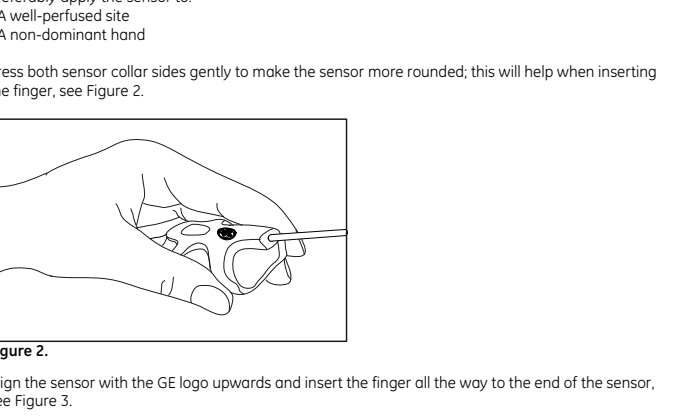


Figure 2.

Use the TruSignal with the GE logo upwards and insert the finger at the way to the end of the sensor, see Figure 3.

