
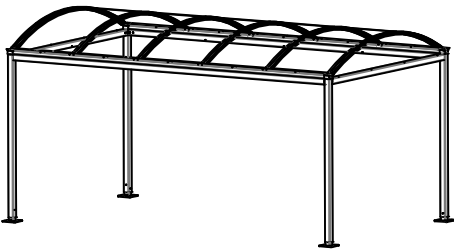
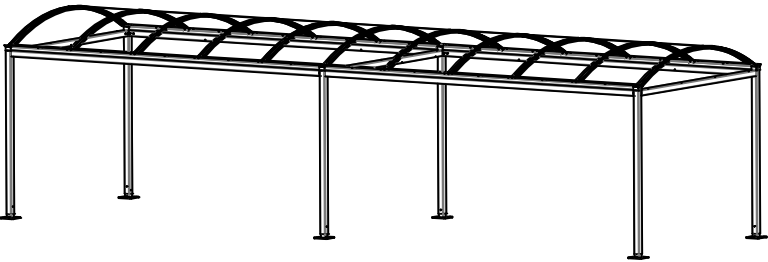
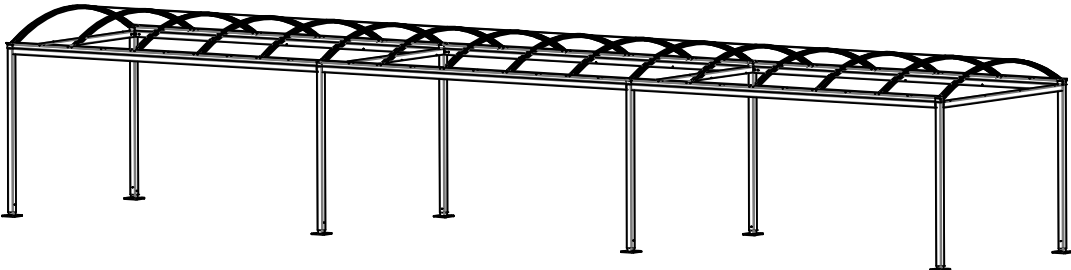



Notice de montage (Mounting instructions) Varennnes module 5m sans habillage (without cladding)

Version (Type)	
5m	
10m	
15m	


1

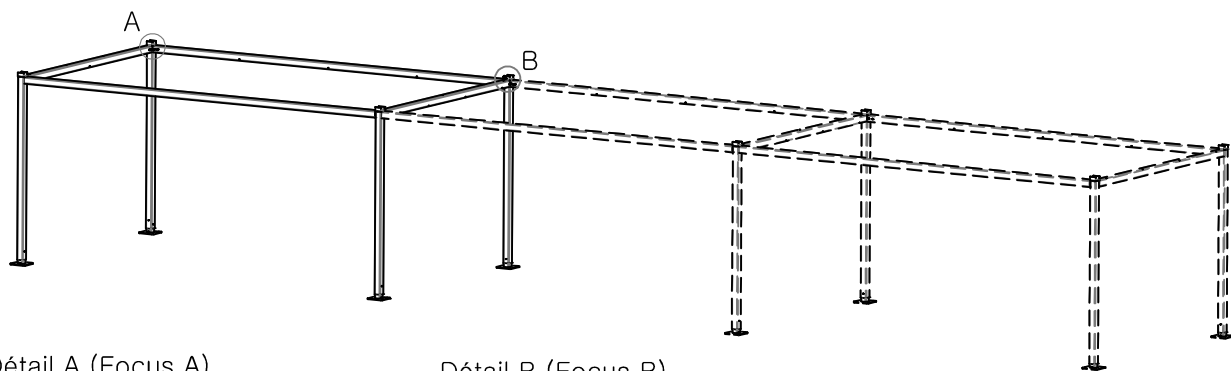


Détail A (Focus A)

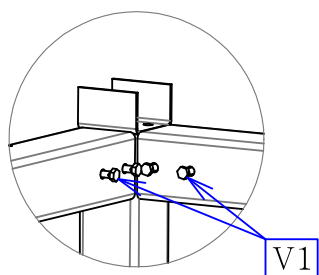

Détail B (Focus B)

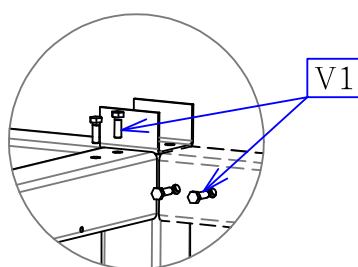


Monter module par module (Installation goes module by module)
 ⚠ Monter la structure sans serrer les vis (Do not tighten screws while mounting the structure)

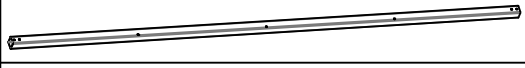
	Version (Type)		
	5m	10m	15m
	4	6	8
	2	2	2
	2	2	2
	–	2	4
	2	4	6
	2	3	4

		Version (Type)		
		5m	10m	15m
V1		16	28	40

2

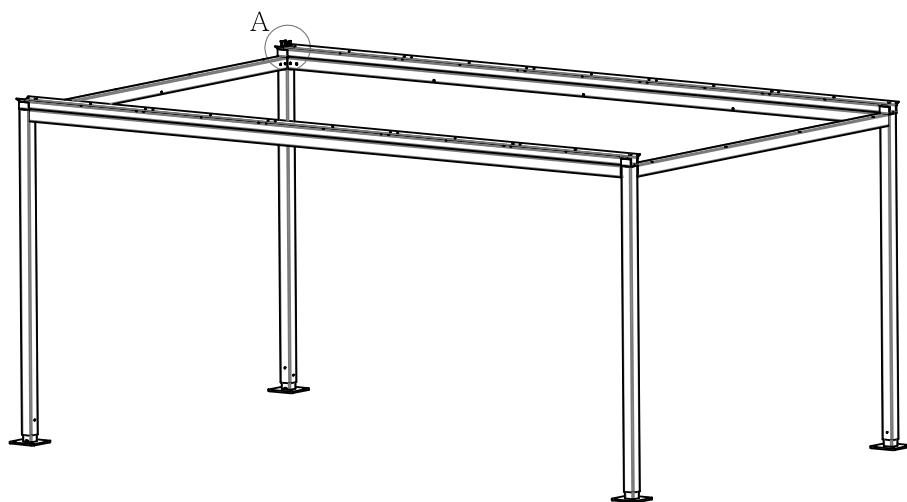

Détail A (Focus A)

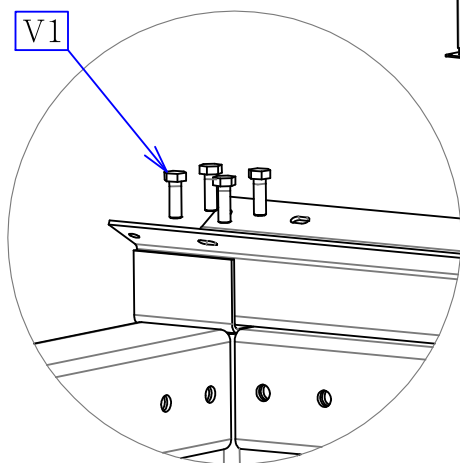

⚠ Monter la structure sans serrer les vis (Do not tighten screws while mounting the structure)

	Version (Type)		
	5m	10m	15m
	2	–	–
	–	4	4
	–	–	2

		Version (Type)		
		5m	10m	15m
V1		16	24	32

3

Fig 1 (Sketch 1)

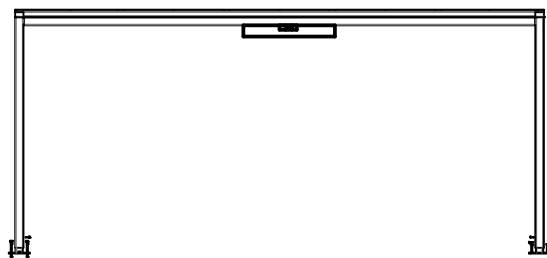


Fig 2 (Sketch 2)



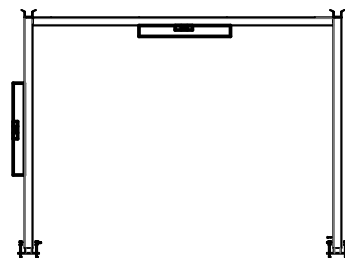


Fig 3 (Sketch 3)

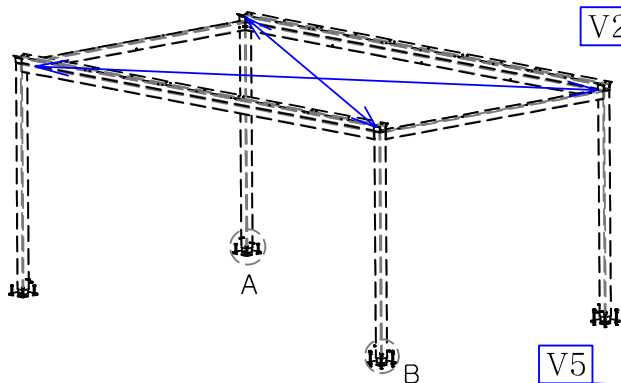

Détail A (Focus A)

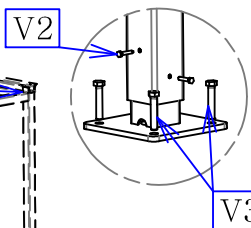

V3

Détail B (Focus B)


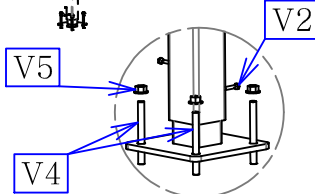


Fig 4 (Sketch 4)

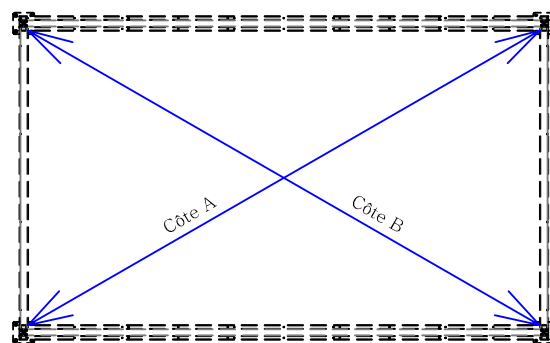

Régler les niveaux de l'abri (Fig 1 et 2)
et fixer les pieds avec V2
Vérifier les diagonales (les côtes A et B
doivent être égales)(Fig 3 et 4)
et mettre les poteaux de niveau.

Serrer les vis de la structure

Sceller les pieds au sol :

Dans BETON

- Percer le béton avec un foret Ø10mm
- Visser V3 avec une clef à choc.

Dans ENROBE

- Percer l'enrobé avec un foret Ø14mm
- Remplir les trous de résine chimique
- Mettre V4 dans le trou en tournant
- Serrer l'abri avec V5

Adjust the shelter's levels (sketch 1 and 2)
and set the feet with V2

Check the diagonals (A and B have to be similar)
(sketch 3 and 4) and level the posts

Tighten the screws of the structure

Seal the plates in the ground:

Into a concrete slab or concrete blocks:

- Drill into the concrete with a 10mm broach
- Screw V3 with an impact wrench


Into asphalt:

- Drill into the concrete with a 14mm broach
- Fill up the holes with chemical resin
- Introduce V4 in the hole, circling
- Tighten the shelter with V5


		Version (Type)		
		5m	10m	15m
V2		8	12	16
V3		16	24	32

		Version (Type)		
		5m	10m	15m
V4		16	24	32
V5		16	24	32


4

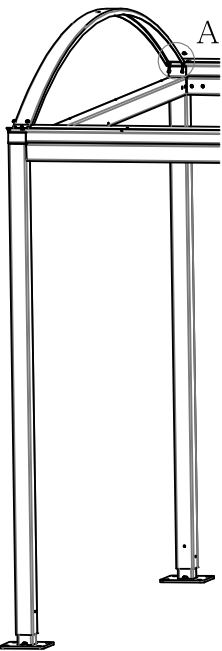


Détail A (Focus A)

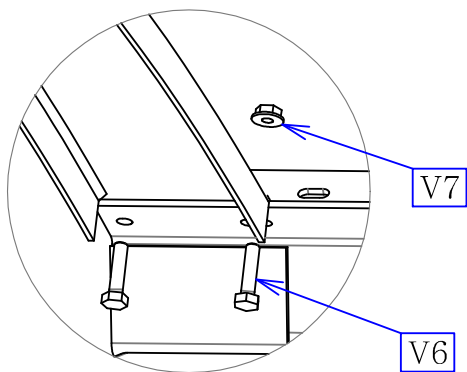


4bis

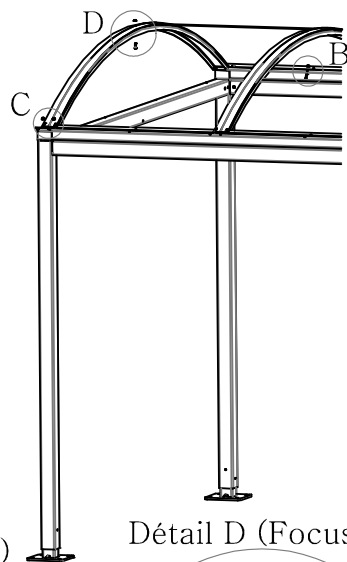


Détail C (Focus C)

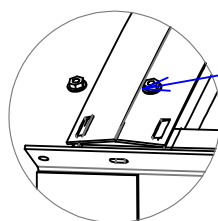


Détail D (Focus D)

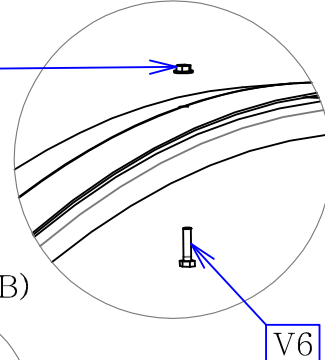


Détail B (Focus B)

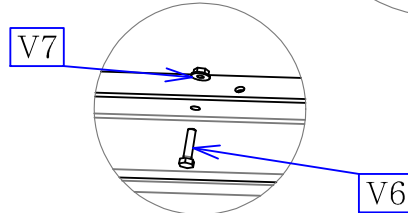

Perçer le polycarbonate avec un forêt de Ø7 (Drill into polycarbonate panels with a 7mm broach)

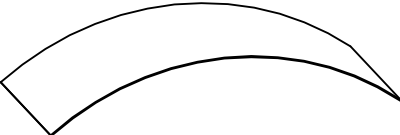	Version (Type)		
	5m	10m	15m
	6	11	16
	6	11	16
	5	10	15

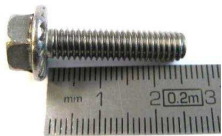		Version (Type)		
		5m	10m	15m
V6		40	75	110
V7		64	119	174